



() () ()

Follow us here to see more exciting projects and ideas!

TOUCH Garden Flags





Featuring the
Touch of Spring Collection
by Beth Albert
and
the Good Vibes Collection
by Courtney Morgenstern
Shipping to stores January 2022

Finished Size: 12 ½ in x 18 in (31.75 cm x 45.72 cm) each

Fabric Needed

3 Wishes Fabric® Touch of Spring Collection

- 1 Panel Dwelling Panel (18751-PNL-CTN-D)
- 5/8 yd Shelves (18748-BLU-CTN-D)
- 5/8 yd Seed Packets (18753-BGE-CTN-D)
- 3/8 yd Bird Houses (18745-BLU-CTN-D)

3 Wishes Fabric® Good Vibes Collection

• 1/8 yd – Circle Dots (18660-WOW-CTN-D)

Additional Supplies Needed:

- 2 Garden Flag Stands
- Piecing and sewing thread
- Removable marker
- Basic Sewing Supplies
- · Sewing machine
- Iron and pressing surface

Before You Begin

Read all instructions before beginning project. Do not pre-wash fabrics. Press fabrics with a dry iron on cotton setting before cutting. Use a $\frac{1}{4}$ in (6.35 mm) seam allowance and sew fabrics with right sides together (RST) unless otherwise noted. Press seams in the direction of the arrows. wof = width of fabric


Note: A printed panel may become slightly skewed during the finishing process. Check if panel is square before cutting by folding the panel so selvages meet. If all edges do not meet, pull firmly from corner to corner until the edges meet. Continue until all corners are square.

Cutting


Use a rotary cutter and ruler to cut the size and number of squares and rectangles from each fabric listed below.




Dwelling Panel – 18751-PNL-CTN-D (36 in x wof / 91.44 cm x 106.68 cm) Fussy Cut 2 – 10 in x 10 in (25.4 cm x 25.4 cm) for Flag Centers

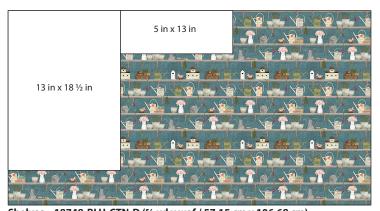

Shelves – 18748-BLU-CTN-D (% yd x wof / 57.15 cm x 106.68 cm) Cut 1 – 13 in x 18 ½ in (5.08 cm x 74.93 cm) for Flag Back Cut 1 – 5 in x 13 in (5.08 cm x 71.12 cm) for Flag Botttom

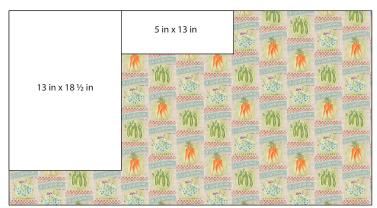

Seed Packets – 18753-BGE-CTN-D (% yd x wof / 57.15 cm x 106.68 cm) Cut 1 – 13 in x 18 ½ in (5.08 cm x 74.93 cm) for Flag Back Cut 1 – 5 in x 13 in (5.08 cm x 71.12 cm) for Flag Botttom

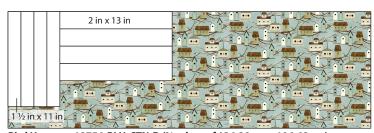

Bird Houses – 18754-BLU-CTN-D (% yd x wof / 34.29 cm x 106.68 cm) Cut $4-1 \frac{1}{2}$ in x 11 in (3.81 cm x 27.94 cm) Vertical Cut 2-2 in x 13 in (5.08 x 33.02 cm) Horizontal

1 in x 10 in		600
1 in x 11 in		(6) (6) (6) (6) (6) (6) (6)
0.0000000000000000000000000000000000000		

Circle Dots – 18660-WOW-CTN-D (% yd x wof / 11.43 cm x 106.68 cm) from the 3W Good Vibes Collection

Cut 4 – 1 in x 10 in (2.54 cm x 25.4 cm) Cut 4 – 1 in x 11 in (2.54 cm x 27.94 cm)



1. Refer to Diagram A to place the Borders around the Flag Center 10 in x 10 in (25.4 cm x 25.4 cm). Sew each Border RST in the order listed. Pin matching middle and ends. **Note:** Check direction of the design. Press seams as shown. Check at each step to ensure the next Border will fit. **Tip:** If one Border is a little larger that the Border it is being sewn to, pin well to ease the fullness and place the fullness on the bottom while sewing.

White Circle Dots Borders

Sides: 2 rectangles 1 in x 10 in (2.54 cm x 25.4 cm)

Top and Bottom: 2 rectangles 1 in x 11 in (2.54 cm x 27.94 cm)

Bird Houses Borders

Sides: 2 rectangles 1 ½ in x 11 in (3.81 cm x 27.94 cm) vertical

Top and Bottom: 2 rectangles 2 in x 13 in (5.08 cm x 33.02 cm) horizontal




www.3wishesfabric.com page 3

2. Pin the Shelves Flag Bottom 5 in x 13 in (12.7 cm x 33.02 cm) RST to the bottom Tree Houses Border with edges even; sew and press (Dia. B). *Note:* Check direction of the design.




3. Pin the top edge of the Flag to the top edge of the Lining RST. *Note:* Check the direction of the design. Sew and press seam open (Dia. C).

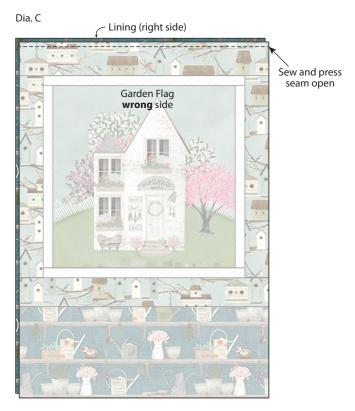

www.3wishesfabric.com page 4

4. Refer to Diagram D to measure 1 in (2.54 cm) away from the seam on both the Flag and Lining and make a mark on each edge. At each mark, clip in ¼ in (6.35 mm).

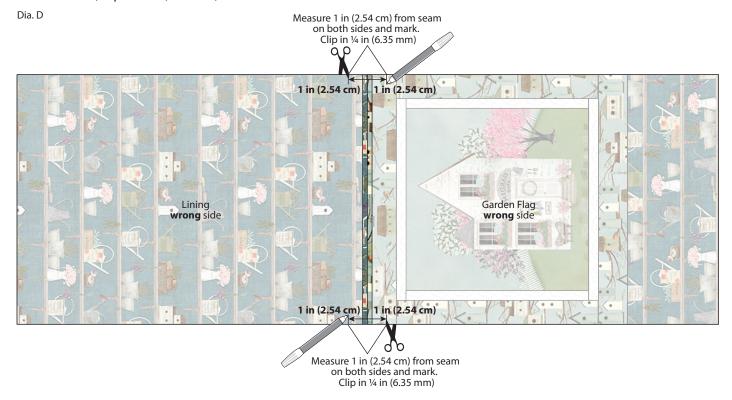

5. Press the clipped area $\frac{1}{4}$ in (6.35 mm) to the **wrong** side. Sew close to the inner edge (Dia. E).

Dia. E



www.3wishesfabric.com page 5


6. Fold the Flag RST with edges even; pin. Sew around the cut edges leaving a 3 in (7.62 cm) opening in the bottom for turning (Dia. F). Turn right side out and press the edges at the opening to the inside. Press all edges flat.



Leave 3 in (7.62 cm) opening

Finishing

- 7. On the right side, measure down 1 in (2.54 cm) from the top edge and topstitch across the Flag to create the casing. Topstitch close to the side and bottom edges which will close opening in the bottom (Dia. G).
- 8. Follow Steps 1 through 7 and use the remaining pieces to create the second Garden Flag.

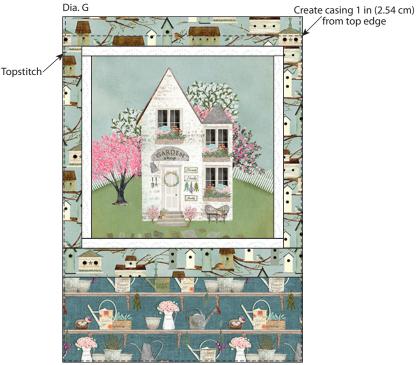

12 ½ in x 18 in (31.75 cm x 45.72 cm)

Finished Care Instructions

Machine wash gentle, cold water. Do not bleach. Hang to dry.